



BOSS Space Saver

QUICK START GUIDE



Scan for Equipment / Parts & Service www.darpro-solutions.com

61-10081

BEFORE STARTING

Confirm the installation location of the Tank. Some applications will require additional plumbing not included in the installation kit.

Electrical Requirements


 120V electrical supply required when used as a caddy fill.

Dimensions

Height: 95"

• Width: 48"


• Depth: 27"

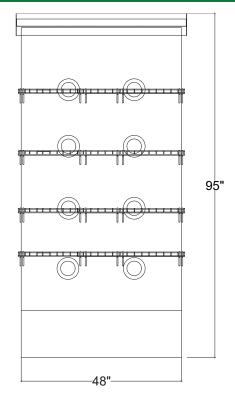


Installation Kit Includes:

1 - JB Weld Epoxy (PN: 700462) 1 - OPW Fitting (PN: 700339) 2 - SS Beauty Rings (PN: 700147) 1 - 2"x15" Pipe Nipple (PN: 700318) 1 - Riser Clamp (PN: 700312) 1 - 2" Coupler (PN:700473) 2 - Hose Barbs (PN: 700308) 2 - Hose Clamps (PN: 700888) 1 - 24" Hot Tar Hose (PN: 700304)

TANK EVACUATION PLUMBING

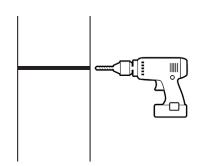



Drill a 1/4" pilot hole through the exterior wall. Before drilling always check the wall for electrical, plumbing or any other obstructions.

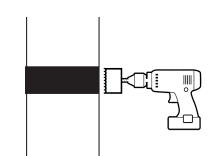

Using the pilot hole, bore a 2.5" hole halfway through the wall from the inside of the building, then complete the hole from the outside, meeting in the middle of the wall. This will reduce chipping of the wall surface.

Assemble the Evac Piping as pictured. The Grease collection fitting and SS Beauty Ring should be flush against the exterior of the building. Use the supplied JB Weld to secure fittings. If required the Black Tar Hose can be cut to length. **Seal all wall penetrations.**




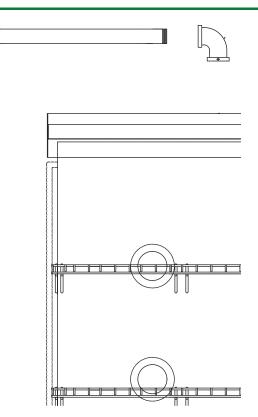


3

BEFORE CONTINUING



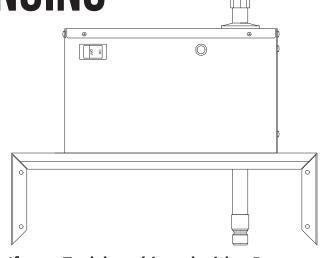

If your Tank has shipped with a Pump Station, continue by following the directions supplied with the Pump Station

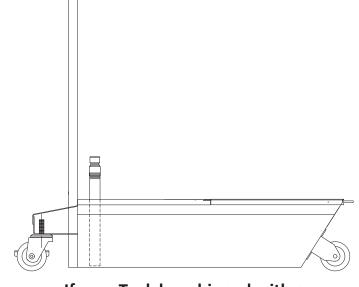


If your Tank has shipped with a Caddy/Portable Grease Shuttle the remaining directions do NOT apply.

FILL LINE PLUMBING (DIRECT PUMP ONLY) If your Tank has shipped with a Caddy/Portable Grease Shuttle,


Fill Line installation is not required.

- Run 3/4" Edible hose (PN: 700416) or 3/4" schedule 40 pipe (black or galvanized) must be run from the Fryer/Pump Station to the 3/4" galvanized union at the top of the tank.
- Always plumb in a direct route with as much fall from the fryer area to tank as possible. Allowing the grease to always fall towards the tank.
- Use T's and plugs instead of elbows whenever plumbing is accessible, to facilitate clean-out.
- Any applications using solid shortening should be heat traced.

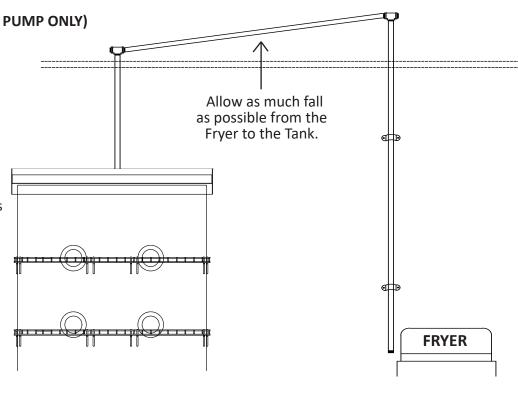



5 FRYER MANIFOLD / HOSE KIT


Optional Components: Fryer Manifold (PN:700553) Fryer Hose Kit (PN: 700155)

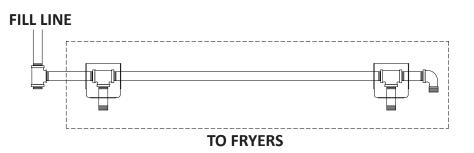

- Attach the Manifold bracket to the wall using appropriate fasteners (not included). The manifold should be mounted 18" - 36" from the ground.
- The manifold kit will connect to the fill line, and provide 3 additional connections.
- Any unused ports should be plugged with a 3/4" cap.

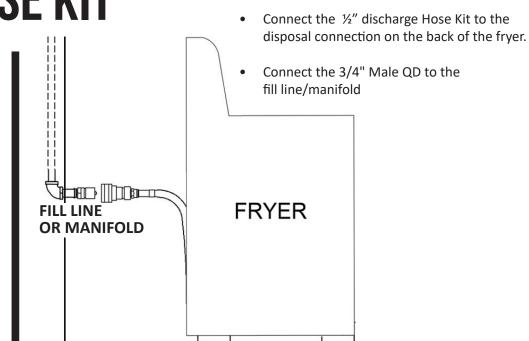

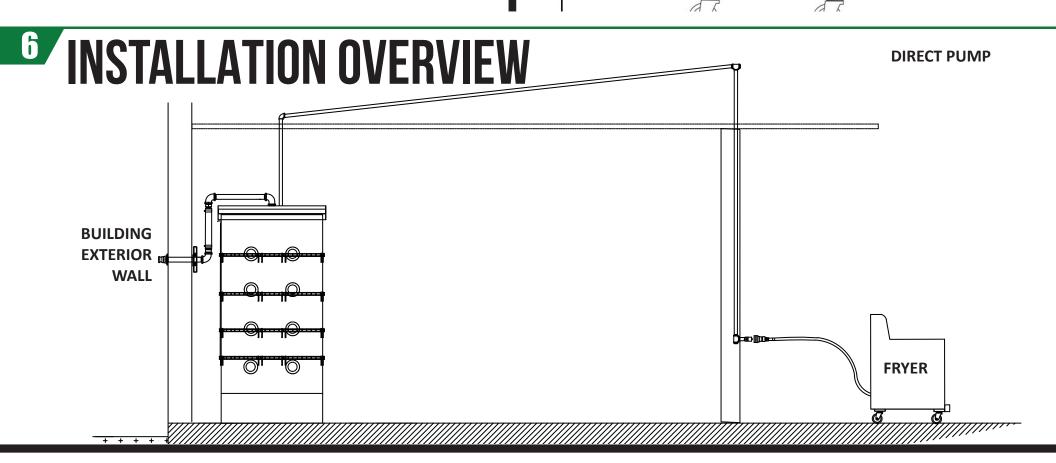

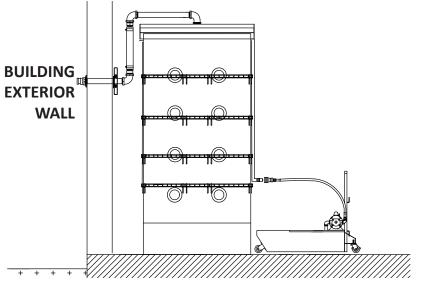

CADDY FILL